



HipZip™


Digital Audio Player

Player Reset

The HipZip™ player provides a convenient way to reset when needed. Simply insert a straightened paper clip into the small hole in the top of the player as shown below.



iomega®

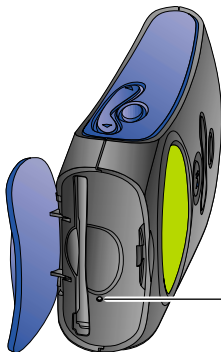

Reset: Insert one end of a paper clip, then remove to reset player.

For more troubleshooting tips, refer to the User's Manual CD. To view the User's Manual on the CD, you must have Microsoft® Internet Explorer® 4.0 or higher or Netscape Navigator™ 4.5 or higher installed on your system.

Copyright © 2000 Iomega Corporation. Iomega, the stylized "i" logo, and HipZip are either registered trademarks or trademarks of Iomega Corporation in the United States and/or other countries. Microsoft and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Certain other product names, brand names and company names may be trademarks or designations of their respective owners.

30409800 9/12/00 C